

5) Sub-User :

Sub-User function can provide multiple user with the differentiated DVR accessing from ADMIN, user 1 to user4. The function(s) which each user can use is limited by ADMIN. This function is available only in **ADMIN LOCK with "YES" in SYSTEM SETUP.**

In order to assign different functions for each user, SUB USERS of SYSTEM SETUP MENU can be selected like 1 .


Te detail function selection for each SUB USER can be done like 2 .

There are SETUP (for MENU configuration setup), SEARCH (for PB and COPY), PTZ (for PTZ camera control), NETWORK, PRIVATE which can hide picture from monitor. After doing setting, **ESC** button enable to return upper MENU.



"SUB USERS"

1

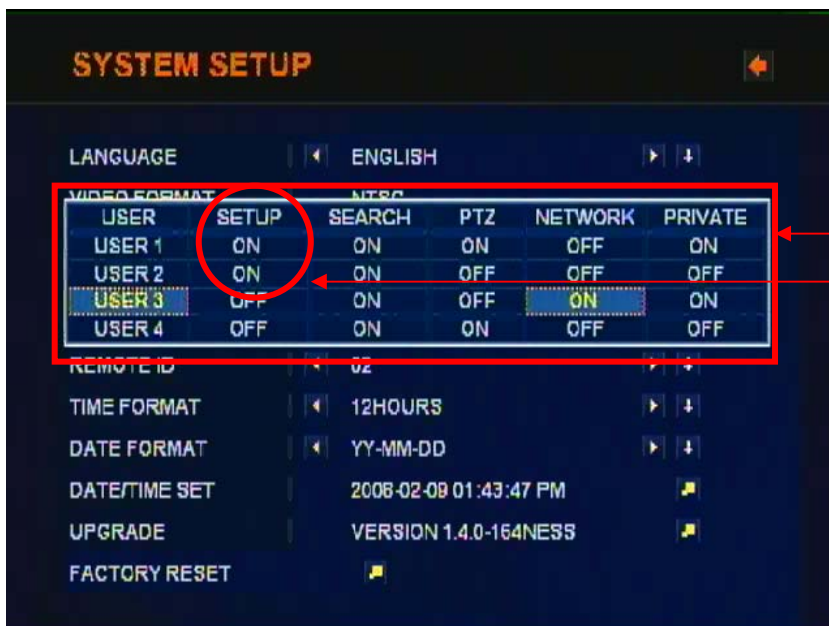


"SUB USERS
Function Setting"

2

3

It should be "ON"
for password
changing.


The initial password for SUB-USER is same as ADMIN's password, "11111111". The modification for each sub-user can be followed by specific user selection in MENU mode. Then **SETUP** (for MENU configuration setup) for the user should be "**On**" by **ADMIN in advance**. The procedure for password modification is like from ① to ④ .

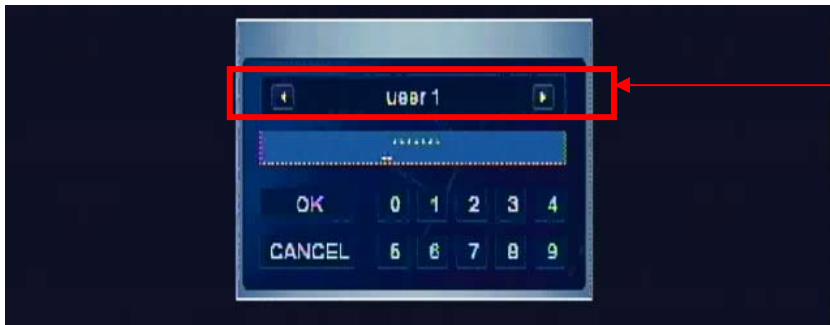

"SUB USERS selection"


①

Initial password is "11111111".

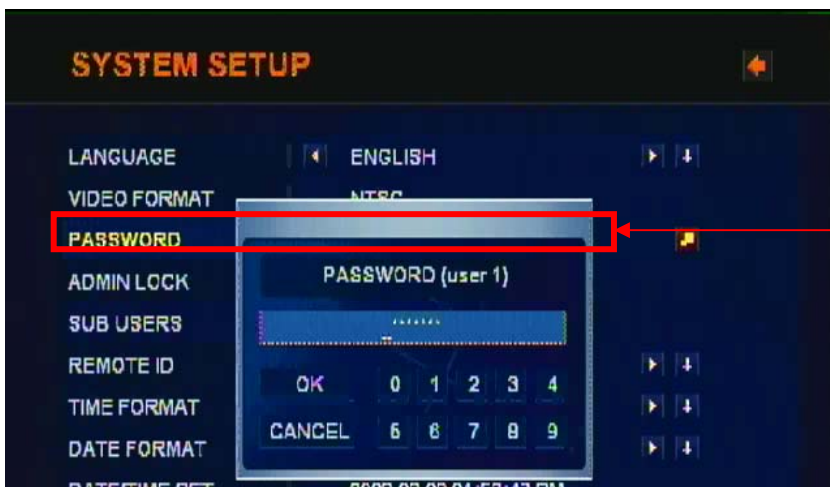


Click Password. Initial password is "11111111".

②

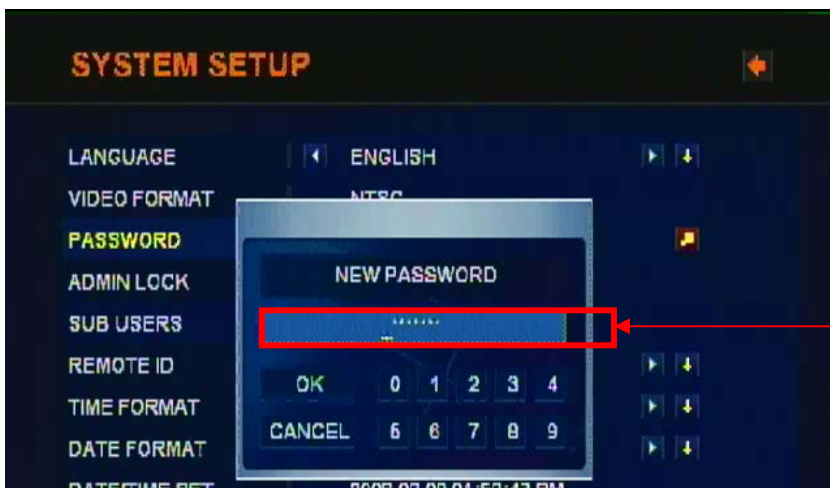

Input new Password (8 digit).

③

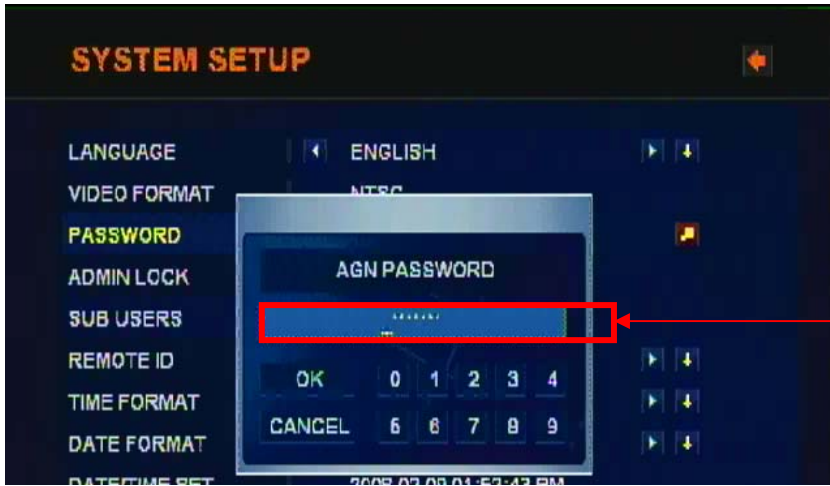

Confirm new Password

4

If **SETUP** (for MENU configuration setup) for the user isn't set as "On" by **ADMIN** in advance, below error message, "ACCESS DENIED!" will be appeared on monitor.



If password is not same, same window for password will be kept.




6) Remote ID :

DVR can set remote ID from 01 to 16 by manual or mouse at first. If it is set as "Off", DVR receives all the remote controller signal. It means that DVR doesn't use remote ID. Factory initial setting is "Off".

Remote ID function:

This remote controller ID function (REMOTE ID function) can be useful in when only one DVR among multiple DVR can be controlled by one remote controller. It is described as infra-red signal locking function coming from remote controller in the DVR which doesn't have same remote ID.

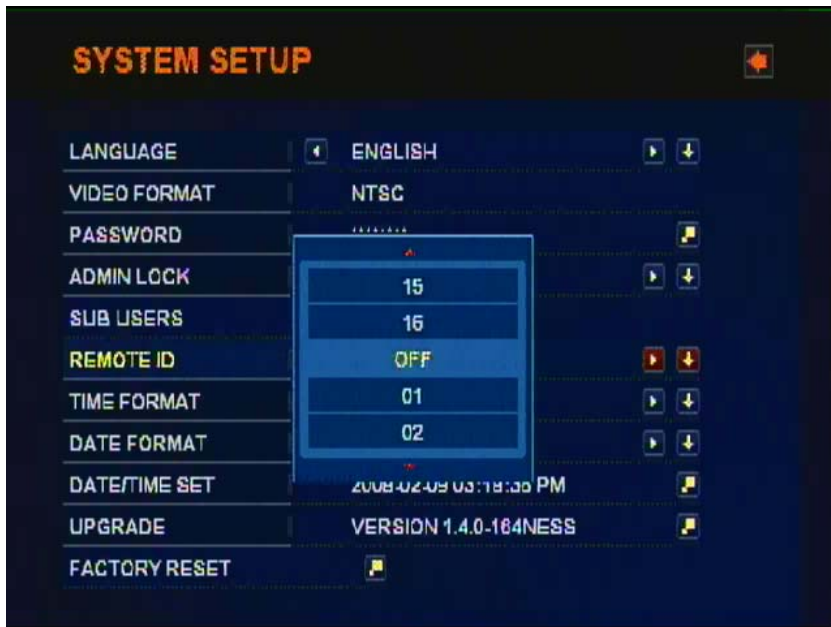

How to use Remote ID:

Remote ID in REMOTE ID of SYSTEM MENU of DVR can be set by manual or mouse. Each DVR can have REMOTE ID from 01 to 16. Factory initial setting is "Off".

It means that DVR doesn't use Remote ID.

If any number of Remote ID is pressed by F1 + No button from 1 to 16, other DVR which doesn't have same Remote ID will lock the signal from remote controller with displaying the "remote Lock Icon" on the left top side of monitor.

Remote Controller Lock function can be set only in live picture mode.

For example, below shows how to use Remote ID for 5set of DVR.

In live picture (monitoring) mode

Other picture mode

DVR1 REMOTE ID = 1



F1(Function) + No 1.
Only this DVR can act by remote CONT.

DVR2 REMOTE ID = 2



DVR3 REMOTE ID = 3



DVR4 REMOTE ID = 4



DVR5 REMOTE ID = 5



The Remote controller's **receiving signal is locked in other DVR (DVR2, ..., DVR5).** Remote controller "Lock Icon" is displayed on the left top side of monitor.

The Remote controller's **receiving signal is locked in other DVR (DVR1, ... , DVR4).** Remote controller "Lock Icon" is displayed on the left top side of monitor .

All the DVR can receive signals from one remote controller temporarily.

To keep the lock function of remote controller can be pressed **F1 + No. 1 (to16) in live picture mode.**



F1(Function) + No 5.
Only this DVR can act by remote CONT.

Remote controller signal Locking Icon



PTZ function by Mouse operation



After single camera channel selection which want to control PTZ function, PTZ On/ Off ICON from below MENU ICON for mouse can be pressed. This PTZ icon can be used again to escape PTZ mode.

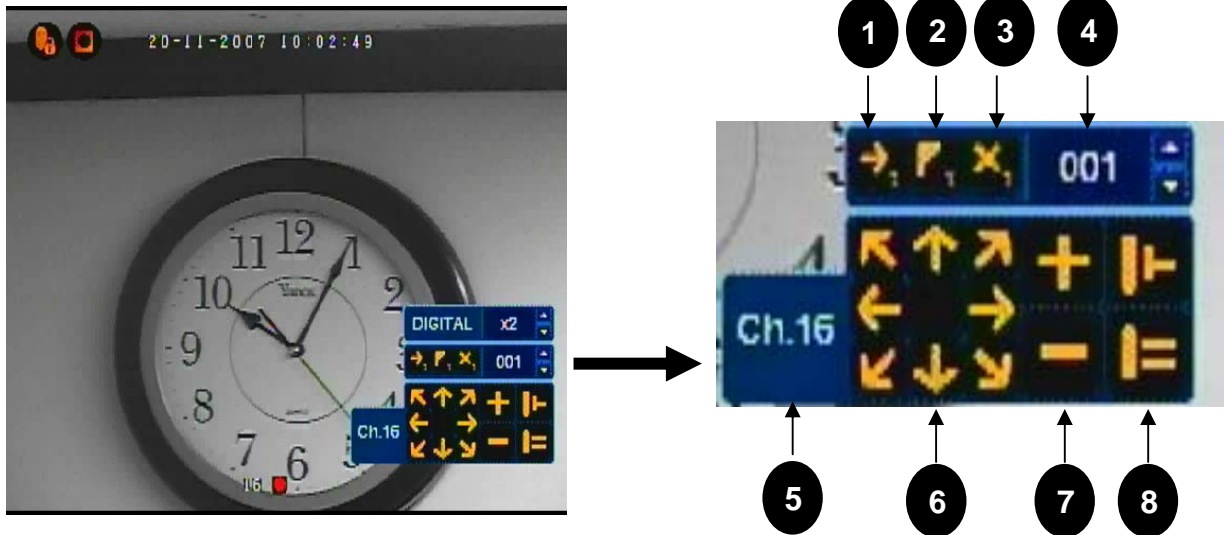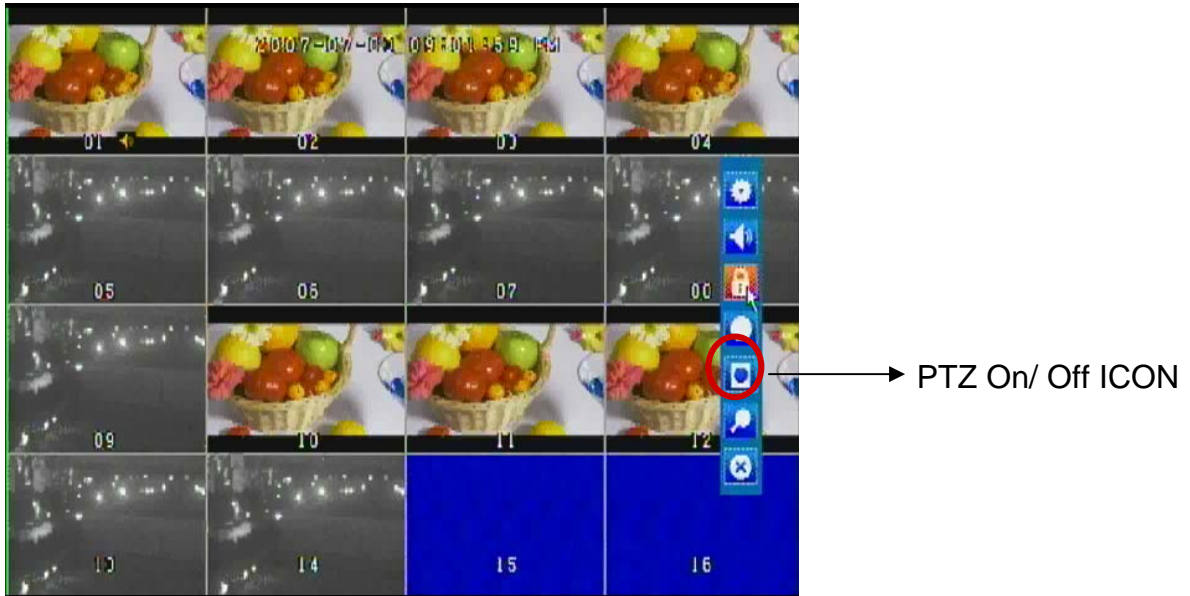

No.	Function Description	No.	Function Description
1	Move to preset of "001" (to 255)	5	Camera Channel for PTZ
2	Preset setting from 001 to 255	6	Direction selection for PTZ
3	Delete Preset Setting	7	+ (Zoom In), - (Zoom Out)
4	Preset Number from 001 to 255	8	Focus near, Focus far

PTZ function by Mouse operation (with additional control command)

After single camera channel selection which want to control PTZ function, PTZ On/ Off ICON from below MENU ICON for mouse can be pressed. This PTZ icon can be used again to escape PTZ mode.

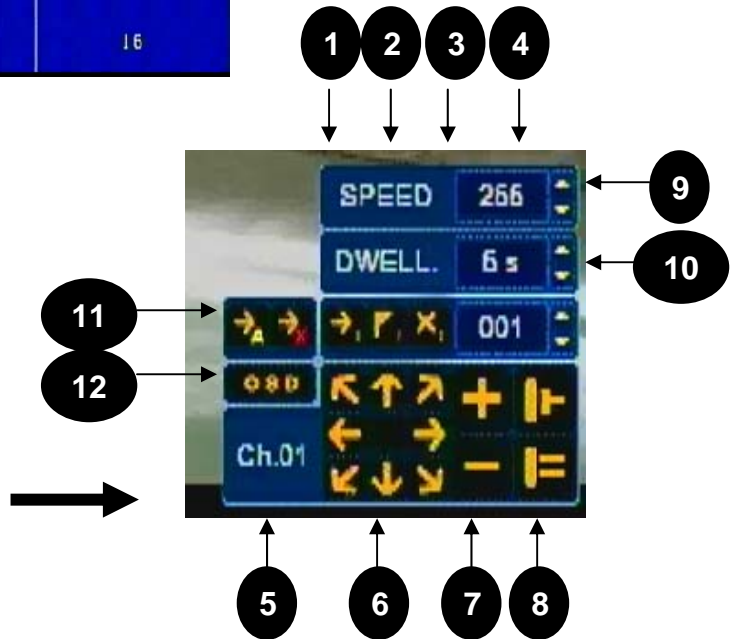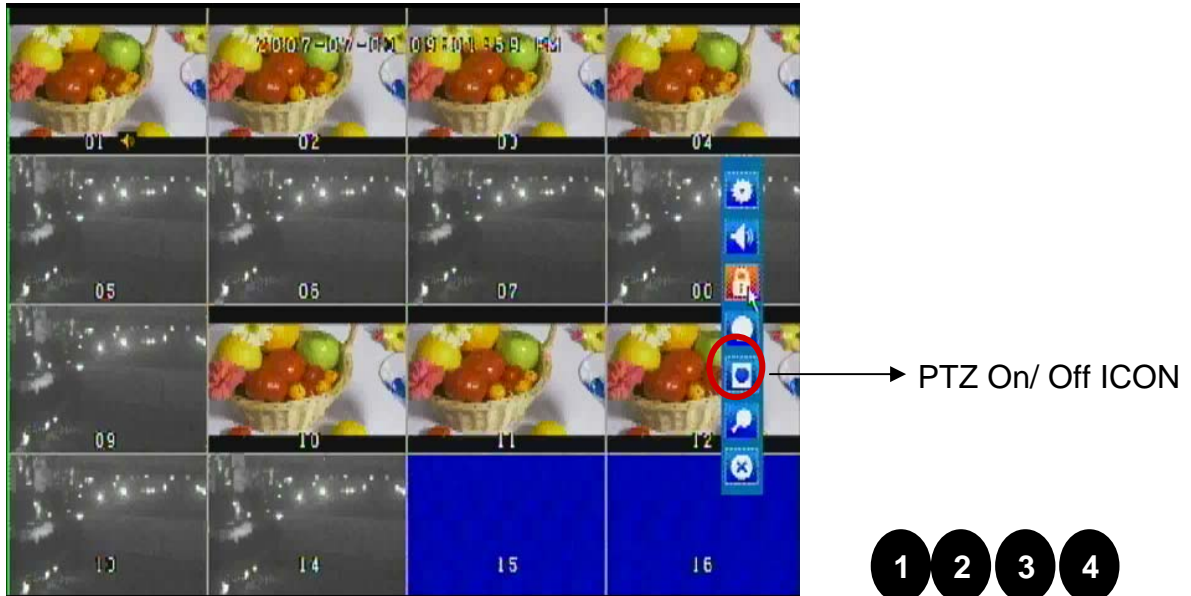

No.	Function Description	No.	Function Description
1	Move to preset of “001” (to 255)	7	+ (Zoom In), - (Zoom Out)
2	Preset setting from 001 to 255	8	Focus near, Focus far
3	Delete Preset Setting	9	PTZ speed (1 to 255)
4	Preset Number from 001to 255	10	PTZ Dwell Time (1 to 255)
5	Camera Channel for PTZ	11	Auto (Touring mode)
6	Direction selection for PTZ	12	PTZ or camera Menu Control